

# HUAWEI MediaPad 10 FHD

## User Guide



## **Introduction - - - - -1**

## **Getting Started - - - - -2**

Your HUAWEI MediaPad at a Glance .....	2
Installing the SIM and microSD Cards .....	3
Charging the Battery .....	4
Battery Usage Precautions .....	5
Powering On or Off .....	5
Gestures .....	6
Unlocking the Screen .....	7
Home Screen .....	8
Notification and Status Icons .....	10
Notification Panel .....	11
Operations on the Home Screen .....	12
Tilt Sensor .....	13
Dock .....	13

## **Text Input - - - - -15**

Bringing Up and Hiding the Onscreen Keyboard ....	15
Selecting an Input Method .....	15
Editing Text .....	16
Android Input Method .....	16
Huawei Input Method .....	17

## **Customizing HUAWEI MediaPad - - - - -19**

Moving a Home Screen Item .....	19
Adding Widgets to the Home Screen .....	20
Removing a Home Screen Item .....	20
Adding a Home Screen .....	21
Deleting a Home Screen .....	21
Customizing the Wallpaper .....	22

Adjusting the Volume .....	23
Setting the Ringtone .....	23
Adjusting the Screen Brightness .....	24
Setting the Screen Timeout Period .....	24

## **Internet Connection - - - - -25**

Wi-Fi Network .....	25
Connecting to a Wi-Fi Network .....	25
Connecting to a Wi-Fi Network Using the WPS Button .....	26
Turning On Data Services .....	27
Turning Off Data Services .....	27
Creating an APN .....	27
Portable Wi-Fi Hotspot .....	28
Sharing Data Using Wi-Fi Hotspot .....	29
USB Tethering .....	29
Sharing HUAWEI MediaPad's Data Connection .....	30

## **Browser - - - - -31**

Browsing Web Pages .....	31
Downloading a File .....	32
Managing Bookmarks .....	32
Setting Your Home Page .....	33
Clearing the Browsing History .....	33

## **Sharing Data - - - - -34**

Wi-Fi Direct .....	34
Setting Up a Wi-Fi Direct Connection .....	34
Sharing Files Using Wi-Fi Direct .....	35
Sharing Files Using Bluetooth .....	35
Receiving Files Using Bluetooth .....	36

DLNA .....	36
Connecting to a Computer .....	37
Copying Files from a Computer .....	38
Accounts and Synchronization .....	38
Adding an Account .....	39
Removing an Account .....	39
Synchronizing an Account with Its Server .....	40

## **Contacts - - - - -41**

Creating a Contact .....	41
Synchronizing Contacts .....	41
Editing a Contact .....	42
Joining Contacts .....	42
Searching For a Contact .....	43
Deleting a Contact .....	43
Creating a Contact Group .....	43
Editing a Contact Group .....	44
Backing Up Contacts to a microSD Card .....	45
Importing Contacts from a microSD Card .....	45
Importing Contacts from a SIM Card .....	46
Sharing Contacts .....	46

## **Email - - - - -48**

Setting Up an Email Account .....	48
Setting Up a Gmail Account .....	48
Sending an Email .....	49
Checking Email .....	49
Deleting an Email .....	50
Configuring an Email Account .....	50
Deleting an Email Account .....	50

## **Messaging - - - - -52**

Sending a Text Message .....	52
Sending a Multimedia Message .....	52
Reading a Message .....	53
Searching For a Message .....	53
Deleting a Message .....	53
Customizing the Message Settings .....	54

## **Multimedia - - - - -55**

Viewing Photos and Videos .....	55
Sharing Photos and Videos .....	56
Editing a Photo .....	56
Playing Music .....	57
Playing Videos .....	57

## **Camera - - - - -59**

Taking Photos .....	59
Recording Videos .....	60
Taking a Panoramic Photo .....	61
Recording an Audio Clip .....	62

## **Navigation - - - - -63**

GPS .....	63
Turning on GPS .....	63
Maps .....	63
Viewing the Current Location .....	64
Finding a Destination .....	64
Using Navigation .....	64

## **Alarms - - - - -66**

Adding an Alarm .....	66
-----------------------	----

Deleting an Alarm .....	66
Turning an Alarm On and Off .....	66
Editing an Alarm .....	66

## **Calendar - - - - -67**

Viewing the Calendar .....	67
Agenda .....	67
Synchronizing the Calendar .....	67

## **Managing Applications - - - - -69**

Downloading an Application .....	69
Installing an Application .....	69
Viewing Applications .....	70
Uninstalling an Application .....	70

## **More Applications - - - - -71**

YouTube .....	71
Gtalk .....	71

## **File Manager - - - - -73**

Creating a Folder .....	73
Searching For a File .....	73
Copying or Moving a File .....	74
Deleting a Folder .....	74
Renaming a Folder .....	74

## **Settings - - - - -76**

Screen Lock .....	76
Power Saving Tips .....	76
Setting the Date and Time .....	76
Clearing the Application Cache .....	77

Checking the Memory Status .....	77
Formatting a microSD Card .....	78
Updating HUAWEI MediaPad .....	78

## **FAQs -----79**

How can I save battery power? .....	79
How do I save my data usage? .....	79
I cannot add more icons to the Home screen. Why?	
What can I do? .....	80
How do I format the internal memory? .....	80
What can I do if I forget the screen unlock pattern or password? .....	80
What can I do if I forget my SIM card PIN? .....	81
My HUAWEI MediaPad runs very slow. What can I do? .....	81
HUAWEI MediaPad played a tone. Why? .....	81
How do I share a slideshow with my friends? .....	82
How long is HUAWEI MediaPad's battery life when it is playing video? .....	82
Can HUAWEI MediaPad play video in RMVB format? .....	82
My HUAWEI MediaPad cannot play some online videos. Why? What can I do? .....	83
I cannot set the date and time on HUAWEI MediaPad. Why? .....	83
Will my alarms still go off when HUAWEI MediaPad is powered off? .....	83
Can I change the save path for recordings? .....	83
My HUAWEI MediaPad cannot receive GPS signals. Why? What can I do? .....	83
The displayed position of HUAWEI MediaPad is	

incorrect. Why? What can I do? .....	84
What is the difference between the screen unlock PIN and password? .....	84

**For More Help - - - - -85**

**Personal Information and Data Security - - - -86**

**Legal Notice - - - - -88**

# 1 Introduction

---

Welcome to the bright new world of HUAWEI MediaPad 10 FHD (HUAWEI MediaPad for short).

With HUAWEI MediaPad, you can:

- > Surf the Internet at lightening-fast speeds.
- > Take photos and record videos anytime anywhere.
- > Enjoy the latest and hottest movies.
- > Immerse yourself in an extraordinary audio experience.
- > Lots more

HUAWEI MediaPad lets your imagination and creativity run free. Start using it now to discover all the pleasant surprises that await you.



All pictures and illustrations in this document are for your reference only. The actual product may vary.

## 2 Getting Started

### Your HUAWEI MediaPad at a Glance



1 Microphone

2 Card slot

3	Light sensor	4	Front camera
5	Power key	6	Volume keys
7	Bluetooth/Wi-Fi antenna	8	Rear camera
9	Flash	10	GPS antenna
11	Composite headphone/ audio-input jack	12	Speaker
13	Power and multifunctional port	14	Dock mount

## Installing the SIM and microSD Cards



1. Open the SIM and microSD card slot covers.

2. Insert the SIM card with its gold contacts facing up, as indicated in the preceding figure. Push the card inward until it clicks into place.




HUAWEI MediaPad is only compatible with standard SIM cards, whose dimensions are 0.76 mm x 15 mm x 25 mm. Inserting a SIM card with other dimensions will damage your HUAWEI MediaPad.

3. Insert the microSD card with its gold contacts facing up, as indicated in the preceding figure. Push the card inward until it clicks into place.
4. Replace the card slot covers.




Do not remove the card slot covers from the tablet.

To remove the microSD card when HUAWEI MediaPad is powered on, access the Home screen, and touch  > **Storage > Unmount SD card**. Then open the microSD card slot cover and gently push the microSD card. The microSD card then pops out.

## Charging the Battery

1. Connect your charger to the provided USB cable.
2. Connect the charger to a power outlet.
3. Connect your HUAWEI MediaPad to the USB cable to start charging the battery.

With HUAWEI MediaPad powered on, the battery icon in the status bar turns  when the battery is fully charged.

## Battery Usage Precautions

- > If HUAWEI MediaPad has not been used for a long time or the battery power is extremely low, you may not be able to power it on immediately after you begin charging the battery. This is normal. Allow the battery to charge for a few minutes before attempting to power your HUAWEI MediaPad on.
- > The battery is rechargeable. Rechargeable batteries have a limited number of charge cycles. When your HUAWEI MediaPad is used for a long time, its standby time will decrease. To maximize its lifespan, do not charge the battery too frequently.
- > The time required to fully charge the battery depends on the ambient temperature and the age of the battery.

## Powering On or Off

### Powering On

Press and hold the power key until HUAWEI MediaPad vibrates.





If HUAWEI MediaPad has not been used for a long time or the battery level is low, you may not be able to power it on immediately after you start charging the battery. Allow the battery to charge for a few minutes before attempting to use it.

## Powering Off

Press and hold the power key until a dialog box is displayed. Then follow the onscreen instructions to power off HUAWEI MediaPad.

## Gestures

The following simple finger gestures make it easy to use your HUAWEI MediaPad.



**Touch:** Touch an item to select or open it.

---



**Double-click:** Touch the screen twice consecutively to zoom in.

---



**Touch and hold:** Touch and hold the screen to display an options menu.

---



**Flick:** Flick up or down to scroll up or down.  
Flick left or right to switch between screens.

---



**Drag:** Touch and hold an item to drag it to another position.

---





**Pinch:** Pinch two fingers together or apart to zoom in or out. You can use this gesture when browsing photos and web pages.


---

## Unlocking the Screen

HUAWEI MediaPad supports multiple screen unlock methods. The default unlock method is used here as an example to illustrate how to unlock the screen.

 
1. Press the Power key to wake up the screen.
2. Drag  to the right until it reaches .



- > When the screen lock is set to 2D unlock mode, flick left or right in the clock area on a locked screen to switch to the **Music+** player.
- > You can drag  to the shortcut icons on the top, left, or bottom to quickly access the corresponding applications.

## Home Screen



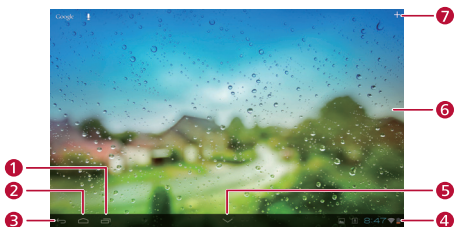



















HUAWEI MediaPad has an easy-to-use screen layout. This section describes the screen elements and basic operations.





- 
- |   |                                       |
|---|---------------------------------------|
| 1 | View recent and running applications. |
|---|---------------------------------------|
- 
- |   |                            |
|---|----------------------------|
| 2 | Return to the Home screen. |
|---|----------------------------|
- 
- |   |                                |
|---|--------------------------------|
| 3 | Return to the previous screen. |
|---|--------------------------------|
- 
- |   |  |
|---|--|
| 4 | Display the time, Wi-Fi connection status, signal strength, battery level, and more. Touch the clock to open the notification panel. |
|---|--|
- 
- |   |   |
|---|---|
| 5 | Hide the operation bar. To open the operation bar, gently slide upward from the bottom of the screen. |
|---|---|
- 
- |   |                                   |
|---|-----------------------------------|
| 6 | Display widgets and applications. |
|---|-----------------------------------|
- 
- |   |              |
|---|--------------|
| 7 | Add widgets. |
|---|--------------|
-

# Notification and Status Icons

The notification bar displays notifications and icons to inform you of HUAWEI MediaPad's status.

	Airplane mode		Bluetooth on
	GPS in use		Charging
	Battery full		Battery low
	New emails		Preparing the microSD card
	Upcoming event		Alarms enabled
	Uploading		Downloading
	Memory full		Sign-in or synchronization problem
	Synchronizing data		Synchronization failed
	Connected to a computer		USB tethering on
	Wi-Fi networks available		Connected to a Wi-Fi network
	Connected to the Internet		






- > When  is displayed, charge your HUAWEI MediaPad as soon as possible; otherwise it will automatically power off soon.
- > When your storage space is full,  is displayed. Delete some files or applications; otherwise you will not be able to install or run applications on HUAWEI MediaPad.

## Notification Panel

HUAWEI MediaPad can execute multiple tasks simultaneously. For example, you can browse the Internet while downloading applications. You can check the task progress or results using the notification panel.

Touch the status bar in the lower right corner of the screen to open the notification bar. You can then check task progress and new notifications.

 
You can also perform the following operations:

- > Touch  or other icons to enable or disable the corresponding functions, such as Wi-Fi and Bluetooth.
- > Touch  to display the settings screen.
- > Slide your finger left or right across a notification to delete it.
- > Touch  to clear the notification panel.


To close the notification panel, touch the Home screen.

## Operations on the Home Screen

- > To open an application, from the Home screen, touch the application icon.
- > To switch between screens, from the Home screen, flick left or right.

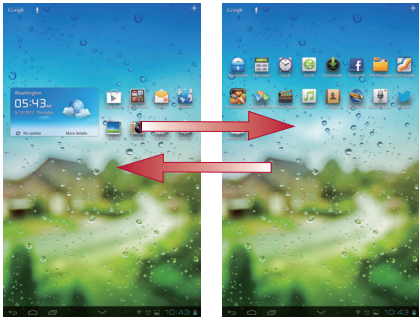

 
- > To customize the Home screen, touch and hold a blank area on the Home screen to display an options menu, from which you can choose to customize the wallpaper, widgets, and more.

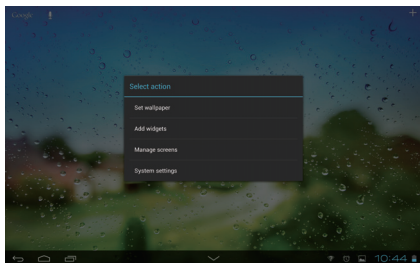

## Tilt Sensor

A tilt sensor is a built-in system that automatically adjusts the display orientation when you rotate the device.

If you rotate HUAWEI MediaPad when browsing a web page, viewing an image, or composing a message, the orientation of your screen will change to the landscape or portrait view automatically. You can also install tilt sensor-based applications, such as car racing games.

To disable the auto-rotate function, open the notification panel, and switch off .

## Dock

A dedicated dock for your HUAWEI MediaPad is available separately.

After connecting to a dock, HUAWEI MediaPad is transformed into a laptop computer with a physical keyboard.

You can conveniently operate HUAWEI MediaPad and connect it to other devices through the ports on the dock.



For details about how to install and use the dock, see the user guide came with it.




After HUAWEI MediaPad is connected to a dock, the onscreen keyboard will no longer appear. You can use the dock to enter text.

## 3 Text Input

---

### Bringing Up and Hiding the Onscreen Keyboard

HUAWEI MediaPads are pre-installed with multiple text input methods. You can conveniently enter text using the onscreen keyboard.

- > To bring up the onscreen keyboard, touch a text input field.
- > To hide the onscreen keyboard, touch .




If the onscreen keyboard blocks some of the operation buttons, hide the onscreen keyboard to facilitate your operations.


If you prefer a physical keyboard, you can purchase a laptop dock.

### Selecting an Input Method

To switch between input methods:

1. Touch a text field to bring up the onscreen keyboard.
2. Touch  in the notification bar.
3. From the displayed options menu, select the desired input method.



 
From the Home screen, touch  > **Language & input** to set the default input method.

# Editing Text

You can copy, cut, and paste text using the onscreen keyboard.

- 1. To edit text, touch and hold the text field until two blue cursors appear.
- 2. Drag the cursors to select the text you want to edit.
- 3. Touch **Select all**, **Copy**, or **Cut** to perform the corresponding operation. You can also touch the delete button on the onscreen board to delete the selected text.

## Android Input Method

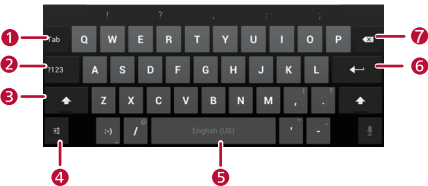


1	Switch to the next text input field.
2	Switch to number and symbol input mode.
3	Switch between upper and lower cases.

	Open the <b>Input options</b> menu, where you can select the input language or configure the
4	Android input method settings, for example, enable or disable auto-capitalization and sound on keypress.
5	Enter a space.
6	Start a new line.
7	<ul style="list-style-type: none"> <li>&gt; Touch to delete the character to the left of the cursor.</li> <li>&gt; Touch and hold to delete all characters to the left of the cursor.</li> </ul>



The preceding figure is for your reference only. The keys may look slightly different.

## Huawei Input Method

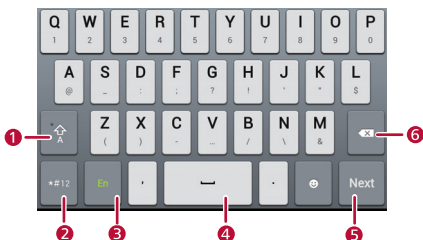 

---

1	Switch between upper and lower cases.
2	Switch to number and symbol input mode.
3	Select an input language.
4	Enter a space.
5	Start a new line.
6	<ul style="list-style-type: none"><li>&gt; Touch to delete the character on the left of the cursor.</li><li>&gt; Touch and hold to delete all characters on the left of the cursor.</li></ul>

---

## 4 Customizing HUAWEI MediaPad

Want to set your own photo as the wallpaper? Want to move your music player to the Home screen so it is easier to find? Want to use the latest hit as your ringtone? Well then go ahead!

 
### Moving a Home Screen Item

You can organize Home screen items as you see fit.

1. Touch and hold the item you want to move until HUAWEI MediaPad vibrates.
2. Drag the item to a desired position, and then release it.




To move an item to another Home screen, drag the item to the left or right edge of the screen and hold. The previous or next Home screen is then displayed.

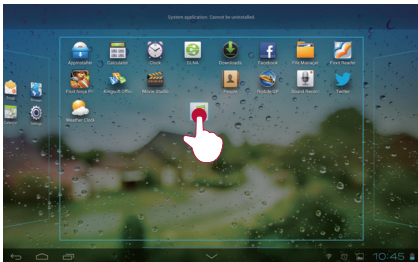

## Adding Widgets to the Home Screen

You can add widgets, such as the calendar, music player, and weather clock to the Home screen.

 1. Touch **+** in the upper right corner of the screen.
2. Touch and hold a widget and drag it to the desired position, and then release it.

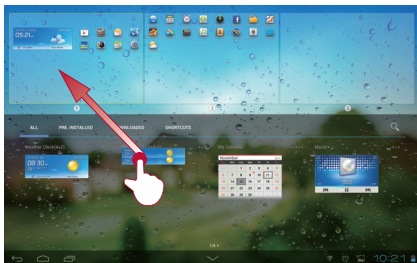

## Removing a Home Screen Item

You can remove Home screen items you no longer want.



 
Removing an application icon uninstalls the corresponding application.

1. Touch and hold the item you want to delete until HUAWEI MediaPad vibrates.
2. Drag the item to the trash icon, and then release it.

## Adding a Home Screen

Adding Home screens enables you to put more applications and widgets on the Home screen, helping you better organize your applications.

1. Touch and hold a blank area on the Home screen.
2. From the displayed options menu, choose **Manage screens**.
3. Touch **+**.

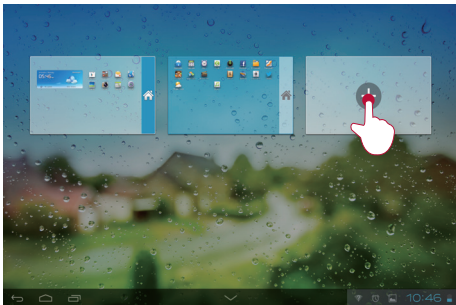


You can have up to six Home screens.

## Deleting a Home Screen

 You can delete a Home screen you no longer want. Note that only blank Home screens can be deleted.

1. Touch and hold a blank area on the blank Home screen.


2. From the displayed options menu, choose **Manage screens**.
3. Touch **X** in the upper left corner.

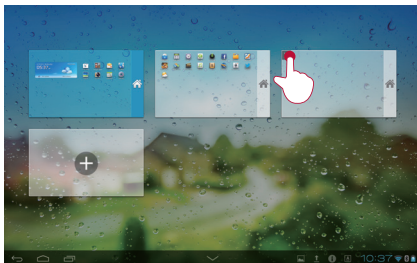

## Customizing the Wallpaper


You can set any desired photo as the wallpaper.

 1. Touch and hold a blank area on the Home screen.
2. From the displayed options menu, choose **Set wallpaper**.
3. Follow the onscreen instructions to choose a wallpaper.

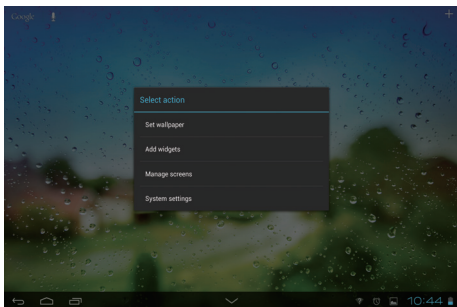

## Adjusting the Volume


You can set the volume of the tones, multimedia, alarms, and notifications.

1. From the Home screen, touch  > **Sound > Volumes**.
2. Drag the sliders to adjust the volumes.

You can also use the volume keys to adjust the volume of running applications.

## Setting the Ringtone

You can set any audio file, such as a song or recording, as the ringtone.

1. From the Home screen, touch  > **Sound > Default notification**.


2. From the displayed options menu, choose **Local music**.
3. Touch the audio file you want, then **OK**.

## Adjusting the Screen Brightness

HUAWEI MediaPad incorporates a light sensor that can automatically adjust the screen brightness based on the ambient light. You can also manually adjust the screen brightness.




Decreasing the screen brightness reduces HUAWEI MediaPad's power consumption.

1. From the Home screen, touch  > **Display** > **Brightness**.
2. Select how you want to adjust the screen brightness.
  - > Automatic: select the **Automatic brightness** check box.
  - > Manual: clear the **Automatic brightness** check box and drag the slider.

## Setting the Screen Timeout Period

To reduce power consumption, HUAWEI MediaPad automatically locks its screen if it is idle for a specified period. You can set the timeout period as you wish.

1. From the Home screen, touch  > **Display** > **Sleep**.
2. Choose a timeout period.

## 5 Internet Connection

---

HUAWEI MediaPad brings you into a new age of wireless Internet surfing. Let's take a look at how this works.

### Wi-Fi Network


A Wi-Fi network is a wireless local area network. Wi-Fi devices can maintain a high-speed connection to the Wi-Fi network even when they are moving. Wi-Fi networks are widely applied in homes and public places, such as hotels and libraries.

### Connecting to a Wi-Fi Network

You can connect HUAWEI MediaPad to a Wi-Fi network and access the Internet through the Wi-Fi network.

To do so, ensure that a wireless network is available. When you use HUAWEI MediaPad at your home, turn on the wireless router to set up a Wi-Fi hotspot. When you use HUAWEI MediaPad in a public place, such as a library or a shopping mall, there may be open Wi-Fi networks.

HUAWEI MediaPad's power consumption increases after you turn on the Wi-Fi function. To save battery, disable the Wi-Fi function when you do not need to use it.

1. From the Home screen, touch  > **Wi-Fi**.
2. Turn on **Wi-Fi**. Your device then scans for available Wi-Fi networks in range.
3. Select the desired Wi-Fi network.
  - > You can connect to open Wi-Fi networks directly.

- > For an encrypted Wi-Fi network, enter the password when prompted.

When HUAWEI MediaPad is connected to a Wi-Fi network, you can touch its name to view connection details, such as the network speed, encryption mode, and IP address.


With Wi-Fi turned on, after HUAWEI MediaPad returns to the coverage of a previously connected Wi-Fi network, it automatically reconnects to the Wi-Fi network.

## Connecting to a Wi-Fi Network Using the WPS Button

Wi-Fi Protected Setup (WPS) is a function to encrypt a Wi-Fi network by pressing one button. You do not need to enter a password. WPS ensures the network security and simplifies the encryption process.

To connect HUAWEI MediaPad to a Wi-Fi network using WPS, ensure that the router that provides the Wi-Fi supports WPS.

Complete the WPS connection within 2 minutes.

1. Follow the wireless router's user guide to set up a Wi-Fi network. Press the WPS button on the router to start the WPS negotiation (this operation may vary, depending on the wireless router you use).
2. From HUAWEI MediaPad's Home screen, touch  > **Wireless & networks**.
3. Select the desired Wi-Fi network.
4. Select **Show advanced options**. For **WPS**, choose the WPS connection method that corresponds to the


access point, and follow the onscreen instructions to complete WPS authentication.

## 5. Touch **Connect**.

## Turning On Data Services


You can turn on HUAWEI MediaPad's data services to access the Internet using your service provider's network.

Using data services may incur charges. For details, contact your service provider.

1. From the Home screen, touch  > **More... > Mobile networks**.
2. Select the **Data enabled** check box.



## Turning Off Data Services

To save your data usage, turn off HUAWEI MediaPad's data services when Wi-Fi networks are available.

1. From the Home screen, touch  > **More... > Mobile networks**.
2. Clear the **Data enabled** check box.

## Creating an APN

 
The Access Point Name (APN) is an Internet access parameter. HUAWEI MediaPad automatically configures its APN, and you can access the Internet without configuring it. You can configure APN parameters if you want to access a specific APN.

1. From the Home screen, touch  > **More...** > **Mobile networks** > **Access Point Names**.
2. Touch  > **New APN**, and follow the onscreen instructions to set the APN parameters.


## Portable Wi-Fi Hotspot

If HUAWEI MediaPad has Internet access, it can work as a Wi-Fi hotspot, converting mobile signals into Wi-Fi signals and allowing Wi-Fi devices to access the Internet.

If you have subscribed to a service plan with unlimited or abundant data traffic, you can share your HUAWEI MediaPad's data usage with other devices.

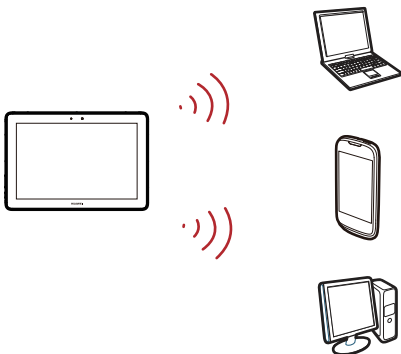

## Sharing Data Using Wi-Fi Hotspot

 
1. From the Home screen, touch  > **More...** > **Tethering & portable hotspot**.
2. Select the **Portable Wi-Fi hotspot** check box.
3. Touch **Portable Wi-Fi hotspot settings** > **Configure Wi-Fi hotspot**. Then follow the onscreen instructions to configure the SSID, password, and other settings.

You can then search for HUAWEI MediaPad's SSID from Wi-Fi enabled devices to access the Wi-Fi network set up by HUAWEI MediaPad.

## USB Tethering

You can share HUAWEI MediaPad's network connection using USB tethering.

This function enables devices to share a network connection through a USB connection.

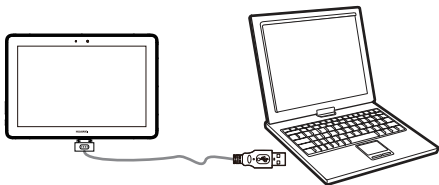

To use USB tethering, ensure that HUAWEI MediaPad has Internet access.


Using USB tethering may incur data traffic charges, depending on which version of HUAWEI MediaPad you purchased. For details about traffic fees, contact your service provider.

## Sharing HUAWEI MediaPad's Data Connection

Connect HUAWEI MediaPad to a computer using a USB cable. You can then access the Internet from the computer using HUAWEI MediaPad's data connection.



To use USB tethering, ensure that your HUAWEI MediaPad has Internet access.

1. Connect HUAWEI MediaPad's multifunctional port to the computer's USB port using the provided USB cable.
2. From the Home screen, touch . From **WIRELESS & NETWORKS**, choose **More....** Then touch **Tethering**.
3. Select the **USB tethering** check box. After a USB tethering connection is set up, you can access the Internet using the computer.



 
You cannot use your HUAWEI MediaPad's USB tethering function and access its microSD card as a mass storage device at the same time.

## 6 Browser

The browser lets you surf the web and browse web pages. Stay on the ball with real-time news and information using your browser. Staying connected and browsing the Internet has never been easier.

### Browsing Web Pages

From the Home screen, touch  to launch the browser.

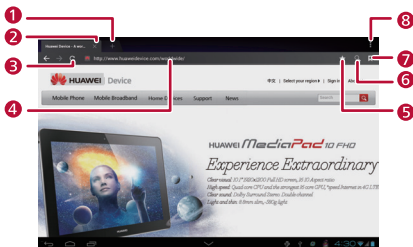

- 1 Open a new tab.
- 2 Close the current tab.
- 3 Refresh the current page.
- 4 Enter a web address.
- 5 Add the current page to bookmarks.

6	Open the search box.
7	View the bookmarks.
8	Display more options.


## Downloading a File

You can download files, images, and even applications from web pages. The downloaded files will be saved in your HUAWEI MediaPad's internal memory or the microSD card.

For example, to download an image from a web page, touch and hold the image, and choose **Save image** from the displayed options menu. To download a file from a web page, touch and hold the link to the file, and choose **Save link** from the displayed options menu.





To protect HUAWEI MediaPad and your personal data, download from trusted sources only. To do

so, touch  > **Security**, and clear the **Unknown sources** check box.



## Managing Bookmarks

You can set websites as bookmarks to access them quickly.

1. From the Home screen, touch  to launch the browser.
2. Touch  to display the bookmark management screen.
3. Touch and hold a bookmark to share, open, or delete it.



## Setting Your Home Page

You can set any web page as the home page.

1. From the Home screen, touch  to launch the browser.
2. Select  > **Settings** > **General**.
3. Touch **Set homepage** and follow the onscreen instructions.

## Clearing the Browsing History

To better protect your privacy, it is recommended that you clear the browsing history from time to time.

1. From the Home screen, touch  to launch the browser.
2. Touch  > **Settings** > **Privacy & security**.
3. Scroll down and touch **Clear history**.

## 7 Sharing Data

---

HUAWEI MediaPad allows you to share files in a number of ways. Sharing data anytime anywhere means family and friends can share your experiences and are always by your side.

### Wi-Fi Direct

Wi-Fi Direct enables you to conveniently set up a connection between two wireless devices conveniently and quickly exchange data between them.

### Setting Up a Wi-Fi Direct Connection


To share files with a device using Wi-Fi Direct, set up a Wi-Fi Direct connection between HUAWEI MediaPad and the device.

1. From the HUAWEI MediaPad's Home screen, touch




> **More....**

2. Select the **Wi-Fi direct** check box.
3. Touch **Wi-Fi direct**.
4. Touch **Search** to scan for Wi-Fi Direct devices in range.
5. From the **WI-FI DIRECT DEVICES** list, touch the desired device to connect to it.

To rename your HUAWEI MediaPad, from the Wi-Fi connection screen, touch  > **Rename**.


## Sharing Files Using Wi-Fi Direct

You can share photos, videos, songs, and other files with your friends using Wi-Fi Direct.


1. From the Home screen, touch .
2. Touch and hold the file you want to share.
3. From the displayed options menu, touch **Share > Wi-Fi**.
4. Choose the device with which you want to share the file.
  - > If the desired device is not displayed, touch **Other devices** to enter the Wi-Fi Direct settings screen. Touch the desired device to connect to it.
  - > If no Wi-Fi Direct connection has been set up, **HUAWEI MediaPad** displays the Wi-Fi Direct settings screen. Touch the desired device to connect to it.

## Sharing Files Using Bluetooth

Bluetooth enables you to conveniently send and receive photos, videos, and other files to your families and friends. You can share files with Bluetooth-enabled devices directly without an Internet connection.

1. From the Home screen, touch .
2. Touch and hold the desired file.
3. From the displayed options menu, touch **Share > Bluetooth**, and follow the onscreen instructions.

## Receiving Files Using Bluetooth

1. From the Home screen, touch  > **Bluetooth**, and turn on **Bluetooth**.
2. After the connected Bluetooth device sends a file, a message is displayed on HUAWEI MediaPad's notification bar.
3. Open the notification, and touch **Accept** from the displayed dialog box to receive the file.



 
Respond to Bluetooth pairing or data transmission requests promptly to avoid connection failure.


## DLNA

The Digital Living Network Alliance (DLNA) aims to implement intercommunication between computers and other electronic products through wired and wireless networks, providing users with seamless digital media services.

DLNA enables users on the same Wi-Fi network to share multimedia files easily. Using DLNA, you can:

- > Share multimedia files with your friends.
- > Access multimedia files on other DLNA devices.
- > Play multimedia files on other devices and control the playback.

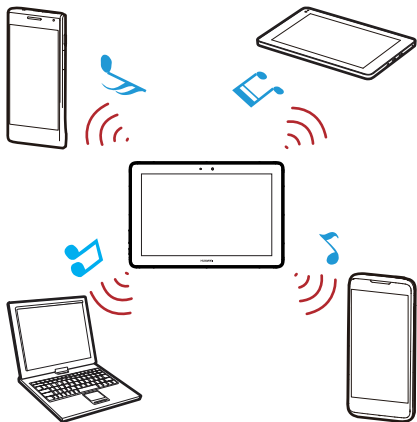

Touch  to open DLNA.



To get help information, touch  > **Help**.

## Connecting to a Computer

You can connect HUAWEI MediaPad to a computer to exchange data.

1. Connect HUAWEI MediaPad's multifunctional port to the computer's USB port using the provided USB cable.
2. From the displayed options menu on the computer, select the desired connection method to connect to

HUAWEI MediaPad. You can then view files or exchange data.



When you connect to the computer for the first time, a driver installation wizard will be displayed on the computer. Follow the wizard to install the driver. If no wizard is displayed, double-click the icon corresponding to HUAWEI MediaPad in My Computer to start the installation.

## Copying Files from a Computer

Ensure that your HUAWEI MediaPad is connected to a computer and the driver program has been installed.

1. From the displayed options menu, touch **Media device (MTP)** on HUAWEI MediaPad.
2. On the computer, open the USB flash drive corresponding to HUAWEI MediaPad from My Computer.
3. Select desired files from the computer, and copy them to the desired folder on HUAWEI MediaPad.



The preceding descriptions apply to computers running Windows operating systems only. Operations in other operating systems may vary.


## Accounts and Synchronization

You can synchronize data, such as contacts, emails, and events, between HUAWEI MediaPad and the account server.

You can also synchronize data between HUAWEI MediaPad and email and social networking accounts.

## Adding an Account

HUAWEI MediaPad enables you to add multiple accounts, such as email accounts. After adding an account, you can synchronize data between the account and the server.

1. From the Home screen, touch  > **Accounts & sync**.
2. Touch **Add account**.
3. Select an account type, enter your email address and password, and touch **Next**.
4. Follow the onscreen instructions to configure the account. It is recommended that you keep the default settings.


After an account is set up, it appears in the account management list.

You can set the account name, email signature, and mailbox refresh frequency, and synchronize your calendar and contacts on HUAWEI MediaPad with the account server.

## Removing an Account

You can remove accounts you no longer need.

This will not affect any data stored on the server.


1. From the Home screen, touch  > **Accounts & sync**.
2. Select the account you want to delete.

3. Touch  > **Remove account** > **Remove account**.

## Synchronizing an Account with Its Server

You can synchronize data between accounts and their servers.



The data you can synchronize varies with the account service provider. Generally speaking, you can synchronize emails, contacts, and events.

1. From the Home screen, touch  > **Accounts & sync**.
2. Select the account you want to synchronize.
3. Touch **Sync now** in the upper right corner of the screen.

## 8 Contacts

Forget about lugging around business card holders. With HUAWEI MediaPad, you can store your family and friends' contact details easily. In addition, its improved import and export functions let you conveniently recover contacts on different devices.

### Creating a Contact

1. From the Home screen, touch  to display the contact list.
2. Touch .
3. Enter the contact information, such as the name, phone number, and email address.




You can touch **Add another field** to enter more information about the contact, for example, **Notes**, **Nickname**, and **Website**.

4. Touch  to save the contact.



### Synchronizing Contacts

You can synchronize contacts between your HUAWEI MediaPad and Microsoft Exchange or Google accounts.


1. From the Home screen, touch  > **Accounts & sync**.
2. Touch the account you want to synchronize with.
3. Under **Data & synchronization**, touch **Sync contacts**.


If you have not set up the account you want to synchronize with on HUAWEI MediaPad, touch **ADD ACCOUNT** from the **Accounts & sync** screen, and follow the onscreen instructions to set up the account. After the account is set up, HUAWEI MediaPad automatically synchronizes with it.

## Editing a Contact

1. From the Home screen, touch  to display the contact list.
2. Touch the contact you want to edit.
3. Touch  to edit the contact.




- > Touch  to delete unwanted entries.
- > Touch **Add another field** to add contact information.

4. Touch  to save the changes.

## Joining Contacts

To avoid duplicate contacts, join two or more contacts together to form a single contact.

You can join contacts stored in the internal memory only, and not those stored in the SIM card.



1. From the Home screen, touch  to display the contact list.
2. Select the contact you want to merge.
3. From the contact details, touch **Manage joined contacts**.

4. Touch **Add contact**, and select the contact you want to merge with the first contact.



You can touch **X** next to a joint contact to delete it.


## Searching For a Contact

HUAWEI MediaPad enables you to find a contact by entering any contact information, such as the phone number or name.

1. From the Home screen, touch  to display the contact list.
2. Touch  and enter any contact information in the displayed search box.
3. From the search results, find the contact you want.




## Deleting a Contact

1. From the Home screen, touch  to display the contact list.
2. Select the contact you want to delete.
3. Touch  > **Delete** > **OK**.






To delete multiple contacts at a time, from the contact list, touch  > **Delete contacts**, and select the contacts you want to delete.

## Creating a Contact Group

You can assign contacts to a contact group, and send messages and emails to them. For example, you can save your frequent contacts to a group.



1. From the Home screen, touch  to display the contact list.
2. Touch **Groups**.
3. Touch  in the upper right corner of the screen.
4. Enter a group name.
5. Touch **Add members**.
6. Select contacts you want to add to the group, and touch **Add members**.
7. When you are done, touch  to save the group.

## Editing a Contact Group

1. From the Home screen, touch  to display the contact list.
2. Touch the group icon to display the contact group list, then the group you want to edit, and touch .
3. You can then:
  - > Edit the group name: Touch the group name editing field, and enter a new name.
  - > Add contacts to the group: Touch **Add members**, select the contacts you want to add to the group, and touch **Add members** > .
  - > Remove contacts from the group: Touch  on the right of the contact name.
4. Touch  to save the changes.



## Backing Up Contacts to a microSD Card

You can back up your contacts to a microSD card in case your contacts are accidentally deleted or lost because of system upgrade.

1. From the Home screen, touch  to display the contact list.
2. Touch  > **Manage contacts**.
3. From the displayed options menu, choose **Export to storage** > **OK**.

## Importing Contacts from a microSD Card

Your HUAWEI MediaPad supports contact files in .vcf format only. This is a standard format for files storing contacts. Contact names, addresses, phone numbers, and other information can be saved in .vcf files.


 
1. Save the contacts you want to import as a .vcf file and save the file to a microSD card.
2. Insert the microSD card into HUAWEI MediaPad.  
From the Home screen, touch  >  > **Manage contacts**.
3. From the displayed options menu, choose **Import from storage**. Then follow the onscreen instructions to select the .vcf file you want to import, and touch **OK**.



The .vcf file you import may not be compatible with your HUAWEI MediaPad. In this case, some contacts may be lost after you import the files.

## Importing Contacts from a SIM Card

You can insert a SIM card into your HUAWEI MediaPad and then import contacts from the SIM card.



1. From the Home screen, touch  to display the contact list.
2. Touch  > **Manage contacts** > **Copy from SIM card**.
3. Touch one contact to import that contact individually or **Select all** to import all contacts to your phone.
4. Touch **Copy** > **Tablet**.




- > You can also import contacts to an account.
- > Different devices display characters in different ways. After you import contacts from a SIM card, some contact information may be garbled or only partially displayed.

## Sharing Contacts

You can share contacts in your HUAWEI MediaPad with others.

1. From the Home screen, touch  to display the contact list.
2. Touch the contact you want to share.
3. Touch  > **Share**.
4. From the displayed dialog box, choose how you want to share the contact.

To share multiple contacts, from the contact list, touch  > **Share contacts**, and select the desired contacts.


## 9 Email


Communication is crucial, which is why HUAWEI MediaPad makes staying in touch with family and friends as simple as possible.

### Setting Up an Email Account

HUAWEI MediaPad provides email functions. You can add email accounts to HUAWEI MediaPad and conveniently send and receive emails.


You must set the required parameters correctly when adding an email account. For details, contact your email service provider.

1. From the Home screen, touch .
2. From the **Add account** screen, select the desired account type.
3. From the **Account settings** screen, enter your email address and password, and touch **Next**.
4. Follow the onscreen instructions to configure the other settings.




After you add an email account, you can touch  > **Settings** > **Add account** to add more accounts.

### Setting Up a Gmail Account

Gmail is an email service provided by Google. After setting up a Gmail account, you can also enjoy other Google services, such as Maps and Gtalk.





To set up a Gmail account, touch  on the Home screen, and follow the onscreen instructions.

## Sending an Email


1. From the Home screen, touch  to open your mailbox. If you have added multiple email accounts, select the desired one.
2. Touch  in the upper right corner of the screen. Then follow the onscreen instructions to enter the recipient, subject, and email content.
3. When the email is ready to be sent, touch .

## Checking Email



If a new email arrives, a notification icon will be displayed in the notification bar.

1. From the Home screen, touch  to open your mailbox. If you have added multiple email accounts, select the desired one.
2. From the email list, select the email you want to read.
  - > Touch  to reply to the sender.
  - > Touch  to reply to all.
  - > Touch  to forward the email.




Mail retrieval may be slightly delayed, depending on the network condition. Touch  in the upper right corner to refresh the email list.

## Deleting an Email



1. From the Home screen, touch  to open your mailbox. If you have added multiple email accounts, select the desired one.
2. From the email list, select the email you want to delete.
3. Touch  to delete it.



To delete multiple emails together, select the emails you want to delete, and touch  .

## Configuring an Email Account

After you add an email account, you can change its settings.


1. From the Home screen, touch .
2. Touch  > **Settings**.
3. From the email account list, select the account you want to edit.
4. Follow the onscreen instructions to configure the general and notification settings.




Do not change **Server settings**; otherwise you may not be able to send or receive emails.

## Deleting an Email Account

After you delete an email account, emails stored on the server are not deleted, but HUAWEI MediaPad will stop sending and receiving emails with the account.

1. From the Home screen, touch .



2. Touch  > **Settings**.
3. From the email account list, select the account you want to delete.
4. Touch **Remove account** to delete it.

## 10 Messaging

---



### Sending a Text Message

As you enter a phone number or contact name, HUAWEI MediaPad displays matching contacts in a list. You can choose the desired contact from the list or continue typing.


1. From the Home screen, touch .
2. Touch **New message**.
3. Enter the recipients, compose a message, and touch  to send the message.


### Sending a Multimedia Message

HUAWEI MediaPad lets you send multimedia messages containing images, videos, slideshows, and more. You can record a video, sing a song, or make a slideshow out of multiple photos, and send them to your friends.

1. From the Home screen, touch .
2. Enter the recipients.
3. Touch  to attach a photo, video, slideshow, or other files.



Touch  > **Add subject** to enter a message subject.


4. Touch  to send the message.



To send a multimedia file, such as an audio clip, image, or video, as an attachment, open **Gallery**,


select the file you want to send, and touch < >  
**Message**.

## Reading a Message

1. From the Home screen, touch .
2. Touch the message you want to read.
  - > While reading a message, you can enter your reply in the text field below that message.
  - > To forward or delete a message, touch and hold it. From the displayed options menu, choose **Forward** or **Delete**.

## Searching For a Message


If you are having trouble finding the desired message from a pile of messages, this function can come to your rescue.

1. From the message list, touch .
2. Enter the keywords in the search box.
3. From the search results, touch the desired message to read it.


## Deleting a Message

1. From the message list, find the thread or message you want to delete.
2. Touch and hold the thread or message. From the displayed options menu, choose **Delete**.



To delete all messages, from the message list, touch  > **Delete all threads**.

## Customizing the Message Settings


To customize text and multimedia message settings, message notification tones, and more, from the message list, touch  > **Settings**.

## 11 Multimedia

HUAWEI MediaPad enables you to listen to music, view photos, and watch videos on an HD display. You can also catch up on the most popular videos, listen to the latest hits, and experience HUAWEI MediaPad's stunning top quality audio.

### Viewing Photos and Videos

Gallery enables you to conveniently view photos and videos. It automatically searches for and organizes photos and videos stored in HUAWEI MediaPad's internal memory and the microSD card for your easy reference.

1. From the Home screen, touch  to open the gallery.
2. Touch a photo or video to view it in full-screen mode. Flick left or right to view the previous or next file.



Pinch two fingers together or apart to zoom in or out. When the auto-rotate function is enabled, the screen orientation automatically changes if you rotate HUAWEI MediaPad.

While viewing a photo or playing a video, you can:



Play photos in the folder as a slideshow.



Open the camera.






Share photos or videos.



Display more options.






## Sharing Photos and Videos

You can share photos and videos via Bluetooth, email, and more.

1. From the Home screen, touch  to open the gallery.
2. Touch and hold the photo, video, or folder until  is displayed at the top of the screen.
3. Touch , and choose how you want to share the selected file or folder, for example, using Bluetooth or DLNA. Then follow the onscreen instructions to complete your operation.

## Editing a Photo

HUAWEI MediaPad provides powerful photo editing functions. You can remove red-eye, and rotate or crop a photo.

 
1. Open , then the desired photo.
2. Touch  > **Edit**. You can then:
  - > Touch  to adjust the brightness.
  - > Touch **FX** to cross-process or posterize the photo, and more.
  - > Touch  to tint the photo, make it negative, and more.
  - > Touch  to rotate or crop the photo, and more.
3. Touch **Save** to save the photo to the **Edited** folder.

## Playing Music

Are you in the mood for music? HUAWEI MediaPad makes listening to music a walk in the park.

From the Home screen, touch  to open the music player.

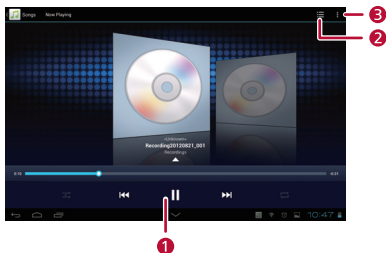

Songs are categorized by album, artist, folder, and playlist, which enables you to find the desired song conveniently.





- 
- |   |                       |
|---|-----------------------|
| 1 | Control the playback. |
| 2 | Open the playlist.    |
| 3 | Display more options. |
- 


## Playing Videos

HUAWEI MediaPad can work as a portable video player so that you can watch downloaded or streaming videos wherever you want.

1. From the Home screen, touch  to open the gallery.
2. Touch the video you want to watch, and touch  to play it.



- > When the video is playing, you can flick up or down to adjust the volume or screen brightness.
- > To avoid accidentally touching the screen, touch  to lock the screen.
- > To control playback, touch  to unlock the screen. The playback controller is then displayed. Drag the slider to control the playback.

When playing a video, you can touch  in the upper right corner of the screen to display more options, such as setting the video screen size and control gestures, and subtitle preferences.

 
## 12 Camera

As time flies by, there must be some memories you want to keep forever. Camera is a great tool for this.

### Taking Photos

Camera lets you capture and preserve every precious moment.

From the Home screen, touch  to open the camera.

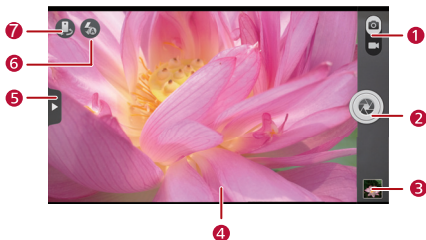

- 1 Switch between camera and video capture modes.

---
- 2 > Touch to take a photo.





---
- 3 > Touch and hold to focus the camera, and release your finger to take a photo.

---
- 3 Thumbnail of the previous shot. Touch to view the photos you took.

---

- 
- 4 Viewfinder screen. Touch anywhere to focus the camera.
- 

Touch to display the options menu as follows:

- >  : Select a picture mode.
  - 5 >  : Select a filtering mode.
  - >  : Select a picture effect.
  - >  : Set the scene mode, white balance, ISO, and more.
- 

- 6 Set the flash mode.
- 





- 7 Switch between the rear and front cameras.
- 

## Recording Videos

Video camera enables you to record pieces of your life.


From the camera screen, drag the slider in the upper right corner to enter video camera mode.




1	Switch between camera and video capture modes.
2	Start recording.
3	Thumbnail of the previous shot. Touch to view videos in the gallery.
4	<p>Display the following options:</p> <ul style="list-style-type: none"> <li>&gt;  : Set the video quality.</li> <li>&gt;  : Adjust the white balance.</li> <li>&gt;  : Select a video effect.</li> <li>&gt;  : Enable or disable video review and <b>GPS tag</b>.</li> </ul>
5	Set the flash mode.
6	Switch between the rear and front cameras.

## Taking a Panoramic Photo


You can take several photos and stitch them into a single photo.

1. From the camera screen, open the settings menu.
2. Touch  > **Panorama** to enter panoramic shooting mode.

3. Touch  to start shooting. Move HUAWEI MediaPad slowly to capture the view.








When the viewfinder screen turns red, the view is not captured. This may happen because you move HUAWEI MediaPad too fast, or the viewfinder scope exceeds the limit of the panoramic view.

4. Touch  to stop shooting. HUAWEI MediaPad then automatically generates a panoramic photo.

## Recording an Audio Clip

HUAWEI MediaPad provides the audio recording function. You can record speeches, concerts, and so on.

1. From the Home screen, touch .
2. To start recording, touch .
3. To stop recording, touch .
4. To start playing the recording, touch .
5. To stop playing the recording, touch .



Ambient noise affects the recording quality. Place the microphone at the sound source to ensure a high quality recording.

If a microSD card is installed on your HUAWEI MediaPad, recordings will be saved to the **Recordings** folder on the microSD card; if no microSD card is available, recordings will be saved to the **Recordings** folder in HUAWEI MediaPad's internal memory.

## 13 Navigation

---

HUAWEI MediaPad can guide you to your destination.

### GPS

Global Positioning System (GPS) uses satellites to provide positioning and navigation services globally.


In GPS, satellites send navigation data from outer space, which is received by GPS terminals on the ground. The GPS terminals analyze the navigation data and obtain your location information.

The positioning accuracy is influenced by the weather. In addition, GPS terminals may not be able to receive signals from the satellites when you use GPS in buildings.

### Turning on GPS

To use location or navigation applications that are based on GPS location data, enable GPS on your HUAWEI MediaPad.

Turning on GPS increases HUAWEI MediaPad's power consumption. Turn off GPS when you do not need it.

1. From the Home screen, touch  > **Location services**.
2. Select **GPS satellites**.

### Maps

The Maps application enables you to locate your current position and obtain traffic data and find businesses.

1. From the Home screen, touch **Google apps > Maps**.
2. You can then browse and control the maps using your fingers:
  - > Drag: move the map.
  - > Double-click: zoom in.
  - > Pinch together or apart: zoom in or out.


## Viewing the Current Location

Maps lets you pinpoint your location.

1. From the Home screen, touch **Google apps > Maps**.
2. Find the blinking cursor that indicates your position.

## Finding a Destination

Maps lets you quickly locate a destination on a map.

1. From the Home screen, touch **Google apps > Navigation**.
2. Touch  , and enter the destination.
3. Select the destination from the search results.  
HUAWEI MediaPad then marks the location on the map.

## Using Navigation

You can have the navigation system guide you to a destination by specifying the starting and ending points. It is like a professional tour guide.

1. From the Home screen, touch **Google apps > Navigation**.


2. Follow the onscreen instructions to enter information, such as the start location and transportation method.

## 14 Alarms

---

### Adding an Alarm

Clock is a great assistant that helps you keep track of time and reminds you of important events.

1. From the Home screen, touch .
2. Touch **Set alarm > Add alarm**.
3. Set the alarm information, and touch **OK**.

Touch an alarm to set it. To add more alarms, touch **Add alarm**.

### Deleting an Alarm

1. From the alarm list, touch and hold the alarm you want to delete.
2. Touch **Delete alarm > OK**.

### Turning an Alarm On and Off

From the alarm list, select an alarm to enable it, or clear the check box to disable it.

### Editing an Alarm

1. From the alarm list, touch the alarm you want to edit.
2. Configure the settings.
3. Touch **OK** to save the alarm.

## 15 Calendar


---

Always forgetting birthdays and other important events?

Problem solved! Calendar on HUAWEI MediaPad is a personal assistant that helps you keep things in track. You will never miss another anniversary, meeting, or appointment.

### Viewing the Calendar

With the calendar, you can create and manage your events, such as meetings and appointments.

1. From the Home screen, touch .
2. To switch between the day, week, month, and agenda view modes, touch the time on the upper left corner of the screen, or you can flick left or right or scroll up and down across the screen.

### Agenda

Agenda automatically searches for your calendar events and lets you know your daily schedule at a glance. You can also set alarms for important events.



To view your agenda, touch **Agenda** from the calendar screen.

### Synchronizing the Calendar

You can synchronize events on your HUAWEI MediaPad with your accounts, such as email accounts.

To synchronize events between your HUAWEI MediaPad and an account, ensure that:

- > You have added the account on HUAWEI MediaPad and the account supports calendar synchronization.
- > Events have been added to the account to activate its calendar function.

1. From the Home screen, touch .
2. Touch  > **Settings** > **Add account**.
3. Select the desired account type, and follow the onscreen instructions to complete synchronization.

To synchronize events from an account to its server, ensure that you have added the events on the specific account when you create them.

## 16 Managing Applications

---

Your HUAWEI MediaPad provides a rich collection of applications designed to make your life easier and more enjoyable. This chapter describes the basic operations you will need to know in order to manage your applications.

### Downloading an Application

You can install applications on HUAWEI MediaPad to expand its functionality and enrich your life.

To obtain applications, you can:



- > Download applications from online application stores, such as Google Play Store.
- > Connect HUAWEI MediaPad to a computer and copy downloaded applications from the computer.

### Installing an Application

After you download an application, install it as follows:



Some third-party applications may not be compatible with your HUAWEI MediaPad. They may not run properly and the system may break down. It is recommended that you download applications from trusted sources only.


1. From the Home screen, touch .
2. Select the application you want to install.
3. Touch  > **Install**.

#### 4. Touch **Done**.




During the installation, an **Install blocked** message may be displayed. Read the message carefully. If you want to continue with the installation, touch **Settings** > **Security**, and select the **Unknown sources** check box to allow installation of third—party applications. Then touch ↩ to proceed.

### Viewing Applications

1. From the Home screen, touch  > **Apps**.
2. Touch **All** to view all applications installed on your device.
3. Touch the application that you want to view details about.

### Uninstalling an Application

You can uninstall applications to free up the internal memory or the microSD card memory.

1. From the Home screen, touch  > **Apps**.
2. Touch **All** to view all applications installed on your device.
3. Touch the application you want to uninstall.
4. Touch **Uninstall** > **OK** to start uninstalling the application.

## 17 More Applications

---

### YouTube

YouTube is a great online video player that lets you watch and upload videos.



Using YouTube incurs data usage. It is recommended that you connect your HUAWEI MediaPad to a Wi-Fi network before you start playing videos on YouTube.

### Gtalk


Gtalk is an instant messaging tool provided by Google. With Gtalk, you can communicate with friends using text messages, voice chat, or video chat.

#### Logging In to Gtalk

To use Gtalk, register a Google account.



If you are logging in to Gtalk on HUAWEI MediaPad for the first time, follow the onscreen instructions to add a Google account.


 
From the Home screen, touch  to open Gtalk, which automatically logs you into your Google account.

#### Using Gtalk

After logging in to Gtalk, you can add and chat with friends online.

## Configuring Gtalk

You can customize Gtalk settings.

1. From the Gtalk main screen, touch  > **Settings**, where you can configure Gtalk general settings, chat notifications, and voice and video chat settings.
2. Touch  to exit the settings screen.

## Logging Out of Gtalk

You can log out of Gtalk when you do not need it.

From the Gtalk main screen, touch  > **Sign out**.



## 18 File Manager

---

**File Manager** enables you to conveniently manage files and applications stored in HUAWEI MediaPad's internal memory and the microSD card. You can perform basic operations, such as creating, viewing, editing, moving, deleting, archiving, compressing, and extracting files.



### Creating a Folder

You can create folders to manage files stored in HUAWEI MediaPad's internal memory and the microSD card.

1. From the Home screen, touch .
2. Touch **Internal** or **SD card**.
3. Touch  then **New folder**.
4. Name the folder. The folder name cannot be the same as that of existing folders in the same directory.
5. Touch **Save**.


### Searching For a File

HUAWEI MediaPad enables you to quickly find a file in the internal memory or microSD card.

1. From the Home screen, touch .
2. Select the search location, **Internal** or **SD card**.
3. Touch  in the upper right corner of the screen.
4. Enter part or all of the file name.
5. Touch **Go** or the enter button to start searching.


Search results are then displayed in a list, and the number of found items is also displayed in the notification bar.

## Copying or Moving a File

1. From the Home screen, touch .
2. Touch and hold the file you want to copy or cut, and choose **Copy** or **Cut** from the displayed options menu.
3. Open the target folder, and touch **Paste**.

## Deleting a Folder

After you delete a folder, all contents in the folder are deleted. Check whether there are important files in a folder before you delete it.


1. From the Home screen, touch .
2. Touch and hold the folder you want to delete, and choose **Delete** from the displayed options menu.
3. In the displayed dialog box, select **OK**.

## Renaming a Folder

To rename a folder, first close the folder and all files and applications in it.

The new name of the folder cannot be the same as that of existing folders in the same directory.

Do not rename system folders or applications' installation folders; otherwise the system or application may not run properly.

1. From the Home screen, touch .


2. Touch and hold the folder you want to rename, and choose **Rename** from the displayed options menu.
3. Enter the new name in the displayed field, and touch **OK** to save the changes.

## 19 Settings

---

### Screen Lock


Locking the screen prevents your device from carrying out undesirable operations when you are not using it. HUAWEI MediaPad lets you lock the screen in a number of ways.

1. From the Home screen, touch  > **Security** > **Screen lock**.
2. Select a locking method and follow the onscreen instructions.

With a screen lock set, if HUAWEI MediaPad is idle for a specified period of time, it automatically locks its screen. You can also press the Power key to lock the screen.

### Power Saving Tips

HUAWEI MediaPad enables you to reduce power consumption with simple settings.


1. From the Home screen, touch  > **Power saving**.
2. Touch **Battery saver** or **Balanced** to make HUAWEI MediaPad enter power-saving mode.

### Setting the Date and Time



If HUAWEI MediaPad is set to automatically update its date and time, it obtains the date and time information from the network and updates


them according to your time zone. In this case, you cannot set the date and time.

1. From the Home screen, touch  > **Date & time**.
2. Clear the **Automatic date & time** check box.
3. Follow the onscreen instructions to manually set the date, time, and time zone.

## Clearing the Application Cache

The system may inform you of insufficient internal memory when you are installing an application or running a large application. Clear the application cache to free up some internal memory.


HUAWEI MediaPad has a limited internal memory. You can install applications to the microSD card, but certain applications must be installed to HUAWEI MediaPad's internal memory to function correctly. To clear the application cache:

1. From the Home screen, touch  > **Apps**.
2. Touch **All** to view the application list.
3. Touch **Clear cache**.

## Checking the Memory Status

Before moving a large file to HUAWEI MediaPad's internal memory or the microSD card, check how much space is available.

To check the total and remaining memory of HUAWEI MediaPad's internal memory and the microSD card:


1. From the Home screen, touch  to enter the settings screen.
2. Touch **Storage** to check HUAWEI MediaPad's memory status.

## Formatting a microSD Card

Formatting a microSD card erases all data on the card.




Back up important data before you format a microSD card.

1. From the Home screen, touch .
2. Touch **Storage > Erase SD card**.

## Updating HUAWEI MediaPad

You can update HUAWEI MediaPad conveniently.

It is recommended that you only use updates officially released by Huawei to update your system, in case the update fails and HUAWEI MediaPad cannot power on.

1. From the Home screen, touch  > **About tablet** to view system information.
2. Touch **System updates (Google)** , **System updates (Huawei)** or **System updates (SD card)**.



- > To download and install updates from a Huawei server, touch **System updates (Google)**.
- > To download and install updates from a Huawei server, touch **System updates (Huawei)**.
- > To install updates saved in the microSD card, touch **System updates (SD card)**.


### How can I save battery power?

- > When your HUAWEI MediaPad is not in use, press the Power button to turn off the screen.
- > Set the screen timeout period to a small value.
- > Set the screen brightness to a small value.
- > Use a headset when you are listening to music or watching videos.
- > Turn off Bluetooth when it is not in use.
- > Turn off Wi-Fi when it is not in use.
- > Turn off GPS when it is not in use.

### How do I save my data usage?

To save data usage, you can:

- > Disable the synchronization function on HUAWEI MediaPad.

From the Home screen, touch  > **Accounts & sync**, and touch the **OFF** button.

To enable synchronization, touch the **ON** button.

- > Set your browser not to automatically load images on web pages.

Launch the browser, touch **Settings** > **Bandwidth management**, and clear the **Load images** check box.

- > Disable HUAWEI MediaPad's data connection when you do not need it.


- > When you are using HUAWEI MediaPad's data connection, do not play online videos, listen to online music, or download ebooks or other files that require real-time data transmission.
- > Disable the roaming function. If you need to use data services while roaming, contact your service provider to choose a suitable service plan.

## I cannot add more icons to the Home screen. Why? What can I do?

Delete some Home screen icons and widgets.

Widgets take up a large proportion of the Home screen. Some widgets look small but actually take up almost the whole Home screen.

## How do I format the internal memory?

1. From the Home screen, touch .
2. Touch **Storage** > **Erase internal storage**.



All data saved in your internal memory will be deleted. Some applications may experience problems, which will be solved after you restart HUAWEI MediaPad.

## What can I do if I forget the screen unlock pattern or password?

You can try the following methods:

After you enter incorrect unlock patterns several times, **Forgot pattern?** is displayed in the lower right corner of the

screen. Touch it and enter your Google account as prompted. You will not be able to unlock the screen if you do not have a Google account or have not added it to your HUAWEI MediaPad.

Your HUAWEI MediaPad may not support unlock using a Google account, depending on which version you have purchased. If your HUAWEI MediaPad does not support the preceding method, you can restore the tablet to its factory settings. For details, contact your vendor.



Restoring HUAWEI MediaPad to its factory settings erases all user data and settings. Back up important data before the restoration.

## What can I do if I forget my SIM card PIN?

Contact your service provider.

## My HUAWEI MediaPad runs very slow. What can I do?

You can try the following:

- > Close any applications you are not using.
- > Uninstall any applications you no longer use.

If the problem persists, restart HUAWEI MediaPad.

## HUAWEI MediaPad played a tone. Why?

HUAWEI MediaPad plays a tone when:





- > It receives a new email.
- > It receives a Bluetooth pairing request.

- > Its battery level is low.
- > A file is downloaded or failed to be downloaded.

For details, check the notification bar.

## How do I share a slideshow with my friends?

You can send a slideshow using a multimedia message.

1. From a message editing screen, touch  > **Slideshow**.
2. Touch **Add slide** to add slides. Touch a slide to edit it.
3. You can then perform the following operations:
  - > Touch **Add picture** to select desired photos.
  - > Touch  > **Add music** to set the background music.
  - > Touch  > **Layout (bottom)** to set where the text is displayed.
  - > Enter text in the text box.
4. Touch  to proceed with the next slide.
5. Touch **Done** to return to the message editing screen, and touch **Send** to send the message.

## How long is HUAWEI MediaPad's battery life when it is playing video?

Up to six hours.

## Can HUAWEI MediaPad play video in RMVB format?

Yes.

My HUAWEI MediaPad cannot play some online videos. Why? What can I do?

It may be because your browser cannot play Flash videos, or the Flash player you have installed does not support the video format. You can try another browser or install another Flash player.

I cannot set the date and time on HUAWEI MediaPad. Why?

It may be because you chose to use the network date and time.

To set the date and time, touch  > **Date & time**, and clear **Automatic date & time**.

Will my alarms still go off when HUAWEI MediaPad is powered off?

No.

Can I change the save path for recordings?

No, but you can copy or cut the recordings to another location.

My HUAWEI MediaPad cannot receive GPS signals. Why? What can I do?

Factors that affect the GPS functions include:

- > Sunspots.
- > Electromagnetic interference.
- > Obstacles that signals cannot pass through, such as buildings or tunnels.

To solve this problem, adjust the HUAWEI MediaPad's position, for example:

- > If you use HUAWEI MediaPad inside, take it to an open area.
- > If you use HUAWEI MediaPad in a car, keep it away from the windshield.

The displayed position of HUAWEI MediaPad is incorrect. Why? What can I do?

The possible causes and solutions are as follows:

- > The satellites HUAWEI MediaPad searched are insufficient. To locate itself, HUAWEI MediaPad must receive signals from at least four satellites. To solve this problem, adjust HUAWEI MediaPad's position.
- > The positioning application is not correctly configured. To solve this problem, see the application's related guide.
- > The positioning application is not correctly installed or is damaged. To solve this problem, re-download, re-install, or replace the application.

What is the difference between the screen unlock PIN and password?

- > **PIN:** 4–16 digits.
- > **Password:** 4–16 numbers, letters, and symbols.

## 21 For More Help

---

Please visit [www.huaweidevice.com/worldwide/support/hotline](http://www.huaweidevice.com/worldwide/support/hotline) for recently updated hotline and email address in your country or region.

## 22 Personal Information and Data Security

---

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- > Place your device in a safe area to prevent it from unauthorized use.
- > Set your device screen to lock and create a password or unlock pattern to open it.
- > Periodically back up personal information kept on your memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- > If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- > If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- > If you use services such as Wi-Fi or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- > Install or upgrade device security software and regularly scan for viruses.
- > Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- > Install security software or patches released by Huawei or third-party application providers.

- > Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- > Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- > If you have concerns about the security of your personal information and data, please contact [mobile@huawei.com](mailto:mobile@huawei.com).

## 23 Legal Notice

---

Copyright © Huawei Technologies Co., Ltd. 2012.  
All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

### Trademarks and Permissions



**HUAWEI**, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Huawei Technologies Co., Ltd. is under license.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not match exactly the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

## Third-Party Software Statement

Huawei Technologies Co., Ltd. does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei Technologies Co., Ltd. will not provide any warranty of any kind for these third-party software and applications. Neither will Huawei Technologies Co., Ltd. provide support to customers who use these third-party software and applications, nor be responsible or liable for the functions of these third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time. Huawei Technologies Co., Ltd. does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei Technologies Co., Ltd. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei Technologies Co., Ltd. shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei Technologies Co., Ltd. shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works, such as texts, images, videos, or software. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product uses the open-sourced Android operating system. Huawei Technologies Co., Ltd. has made necessary changes to the system. Therefore, this product may not

support all the functions that are supported by the standard Android operating system or may be incompatible with third-party software. Huawei Technologies Co., Ltd. shall not be liable for any of such situation.

## DISCLAIMER OF WARRANTIES

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

## LIMITATIONS OF LIABILITY

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI TECHNOLOGIES CO., LTD. ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

## Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.